


Oasis




Installation Instructions Brass Swivel Unions

Tools Required

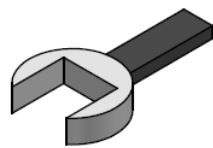

Spanner
(Wrenches)




Thread Tape




Anti Seize Grease
- Swagelok Silver Goop
- Omega 99
- or similar

Oasis Engineering Ltd
129 Birch Avenue, Tauranga, New Zealand.
T: +64 7 928 3808 F: +64 7 928 3809
E: info@oasisNGV.com
W: www.OasisNGV.com


1. Apply thread tape.

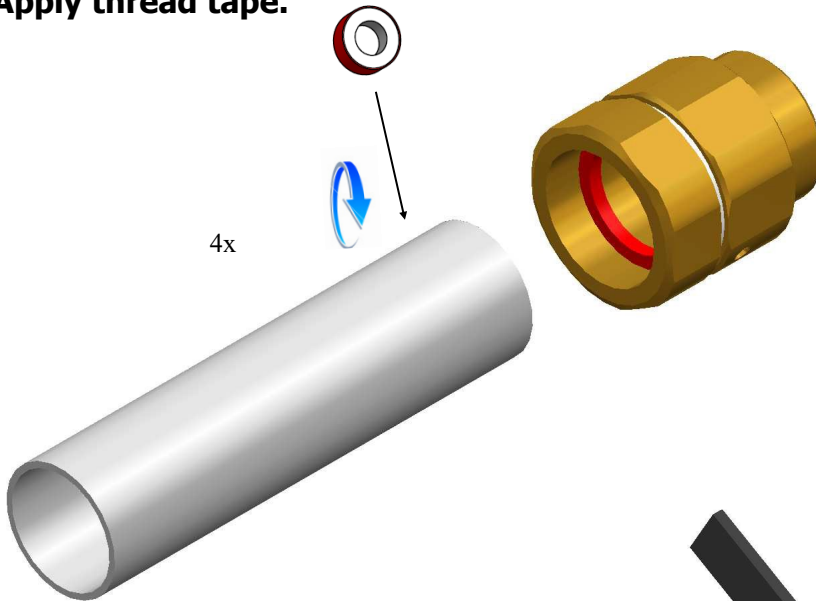


2. Apply never seize and tighten connection.

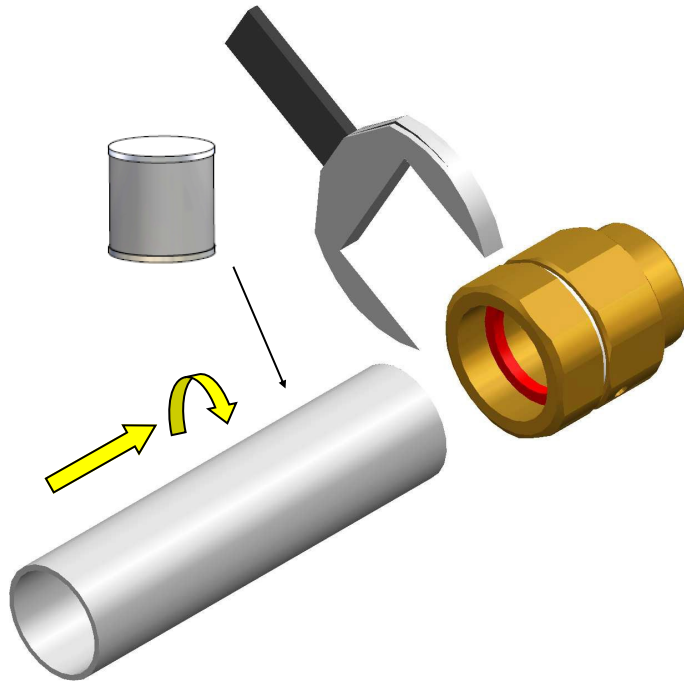


3.

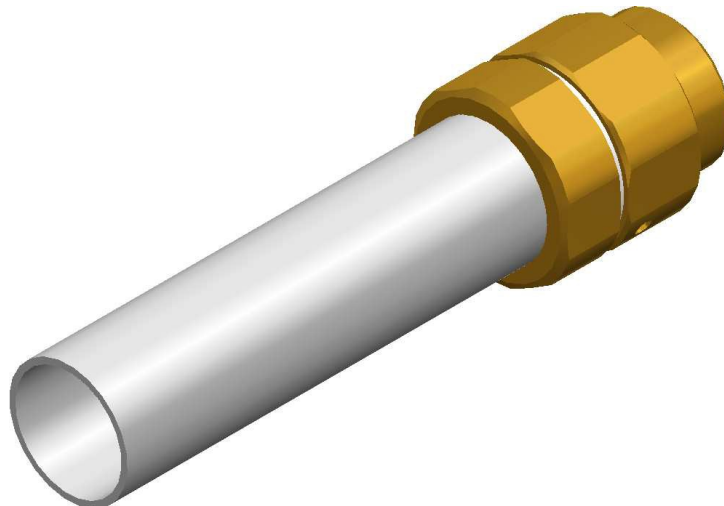

4. Apply thread tape.

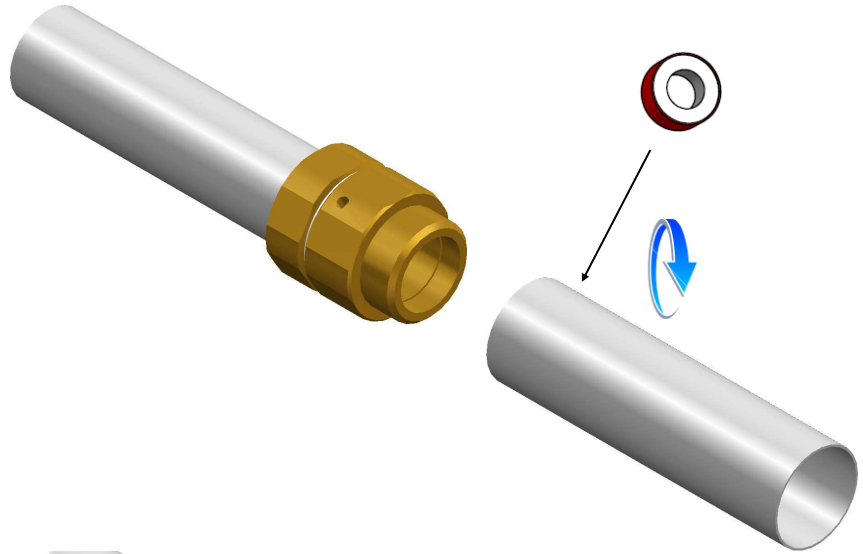

5. Apply never seize and tighten connection.

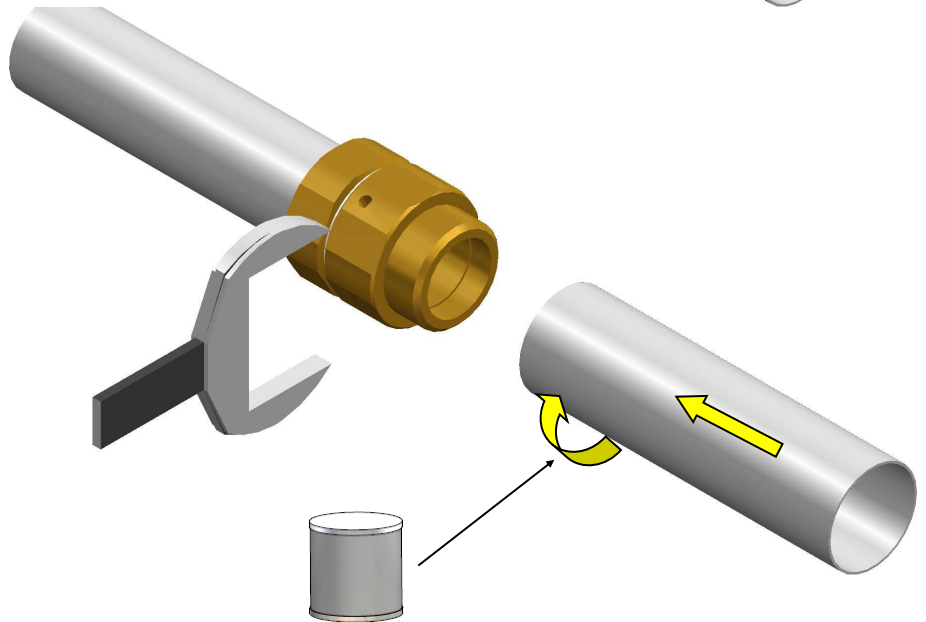

6. Done!

